

**Axcient**

x360Recover Rack  
Quick Start Guide

# Table of Contents

Introduction .....	3
Axcient Support.....	3
Warranty .....	3
STEP 1: Open the Shipping Box .....	4
STEP 2: Connect the Cables .....	4
STEP 3: Power On the Appliance .....	5
STEP 4: Record the IP Address.....	5

# Introduction

This Quick Start Guide provides an overview of the Axcient Rack Appliance setup process, including:

- Setting up your x360Recover (formerly Replibit) BDR Appliance hardware,
- Connecting the power and network cables,
- Locating optional ports on the Appliance, and
- Powering on your x360Recover (formerly Replibit) Appliance.

## Axcient Support

If you encounter problems during the setup process, contact Axcient support using one of the following methods:

- **Phone:** 1 (800) 715-2339
- **[Submit a Ticket](https://axcient.com/partner-support)** (<https://axcient.com/partner-support>)

All Axcient product documentation is available in the [Axcient Knowledgebase](https://support.efolder.net) (<https://support.efolder.net>).

## Warranty

The warranty period for this BDR was set at the time of purchase. Please reference your purchase invoice to identify the warranty period and starting date.


## Quick Start Checklist

**STEP 1: Open the Shipping Box**

- ❑ Open the shipping box and remove its contents, including the Rack, the network cable, and the power cord.

**STEP 2: Connect the Cables**

- ❑ Connect one end of the provided network cable to the back of the Appliance and the other end to your network connection.
- ❑ Next, connect the power cable to the back of the Appliance and plug it into a power source.
- ❑ Optionally, connect a second network cable to the IPMI port. This model is equipped with IPMI functionality that can be used to securely access the BDR remotely. The IPMI is pre-set with a unique username and password, which are listed on the top cover near the left front side of the BDR. We recommend recording these credentials during the installation process.
- ❑ Optionally, connect the x360Recover Appliance to a monitor using a VGA cable (sold separately). You can then use the monitor to temporarily validate a successful boot and the IP address.

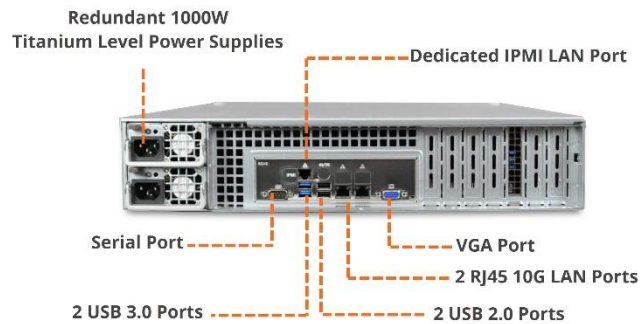

**Serial Number: R** [REDACTED]

**IPMI Username: ADMIN**

**IPMI Password:** [REDACTED]

### STEP 3: Power On the Appliance

- ❑ Press the **Power** button to turn on the Appliance.

The x360Recover backup software is pre-installed on the BDR Appliance and will automatically launch once fully booted. Most x360Recover appliances will also automatically obtain an IP address through DHCP.

**Note:** To access drives, you must first remove the faceplate. To remove the faceplate, pull on the sides of the faceplate.

### STEP 4: Record the IP Address

- ❑ If you connected a monitor to the BDR Appliance, the IP address will display directly on the screen. Record this IP Address.
- ❑ Using a PC on the same network, type the IP address into a Web browser to access the Appliance Web interface.
- ❑ When fully booted, x360Recover must be provisioned (licensed) using the Appliance Web interface.

Your hardware setup is complete! To start protecting systems, please proceed with [Web setup and provisioning](#) (<https://support.efolder.net/hc/en-us/articles/115006751528-Replibit-Setup-and-First-Time-Login>).



```
Welcome to Replibit Backup Manager
The IP of this Server is: 10.0.2.15
replibit login:
```



Axcient

[axcient.com](https://axcient.com)