

Axcient

x360Recover

**Dell Add-on Card
Installation**



Table of Contents

BOSS Card Prep.....	3
Axcient Dell T340 Tower.....	4
Add-On Card Installation	4
Axcient Dell R240XL 1U Rack.....	5
Add-On Card Installation	5
Axcient Dell R540 2U Rack.....	6
Add-On Card Installation	6

BOSS Card Prep

Follow these instructions to prep the BOSS card.



1. Insert the M.2 drive into Slot 0 on the BOSS card.
2. Secure the drive to the card using one of the screws provided with the card.

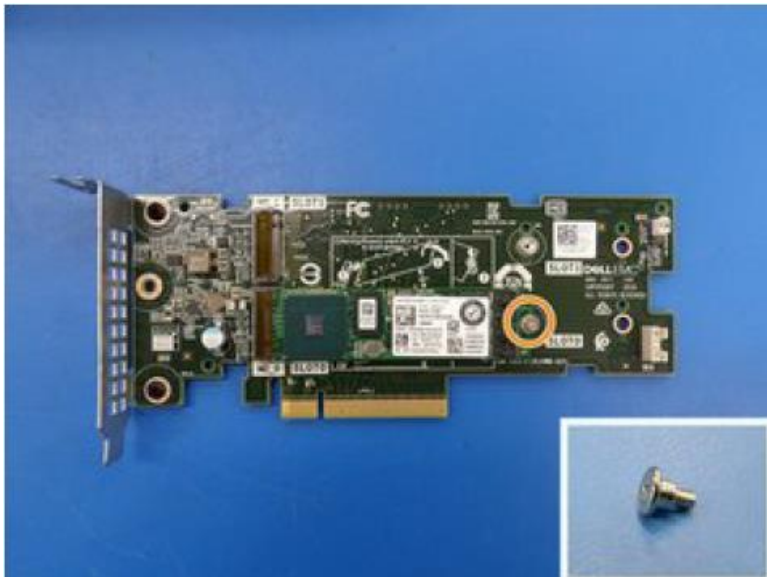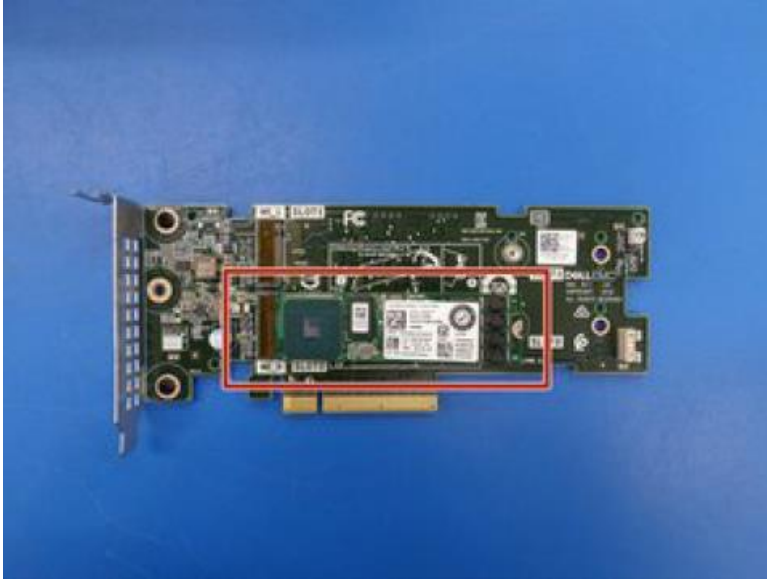

Axcient Dell T340 Tower Add-On Card Installation

Follow these instructions to install the BOSS card:

1. Press to release the highlighted blue tab, then remove and discard the PCI blank.
2. Install the add-on card into Slot 2 then secure the card with the previously released blue tab.

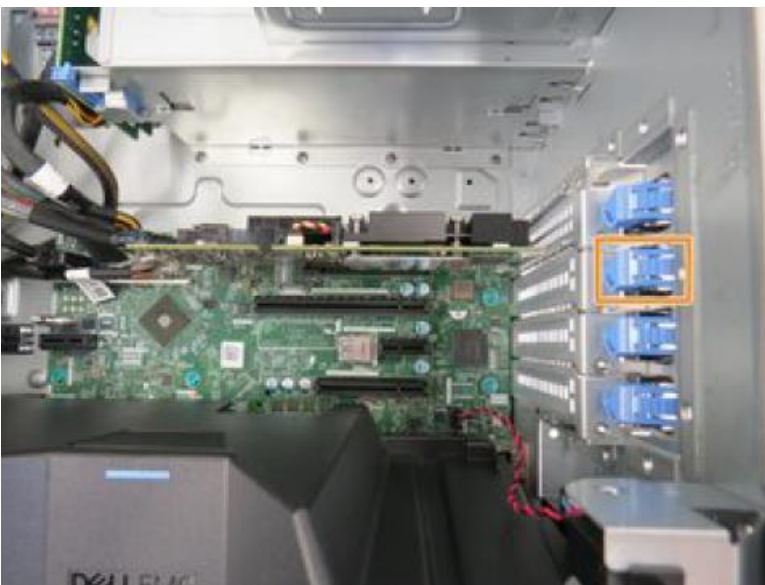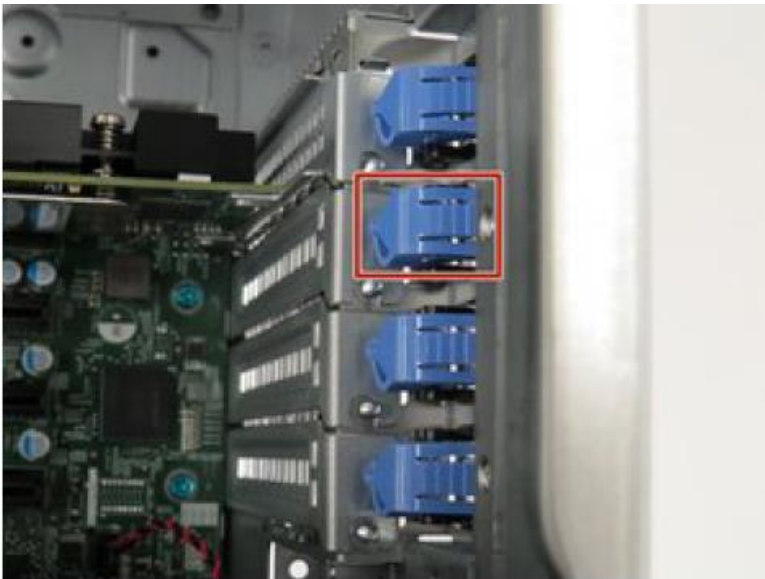


Axcient Dell R240XL 1U Rack

Add-On Card Installation

Follow these instructions to install the BOSS card.



1. Remove the PCI riser assembly from the chassis by lifting it straight up. You may need to move the blue plastic retention piece out of the way.
2. Install the add-on card into the empty slot and reinstall the PCI riser assembly.

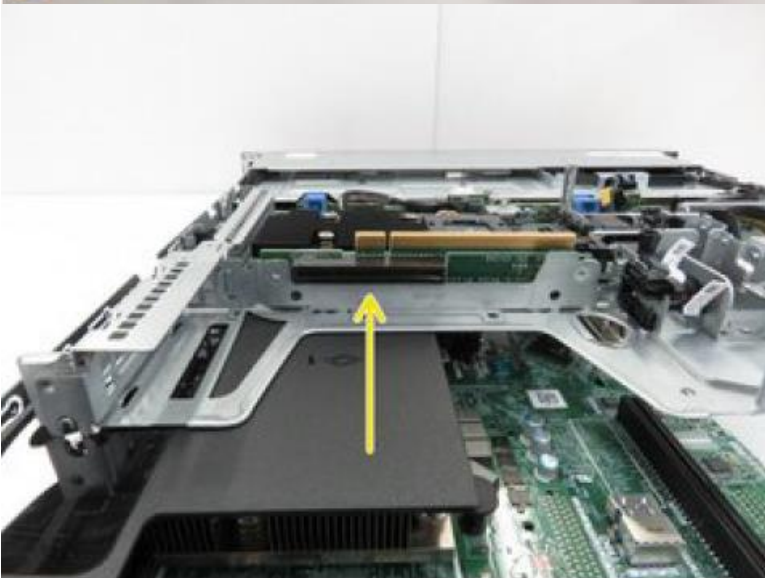

Axcient Dell R540 2U Rack Add-On Card Installation

Follow these instructions to install the BOSS card.

1. Release the blue retention bracket and rotate it up.
2. Remove and discard the highlighted blank filler bracket.
3. Install the BOSS card into the X16 slot.
4. Rotate the blue retention bracket down securing the card, making sure it locks in place.

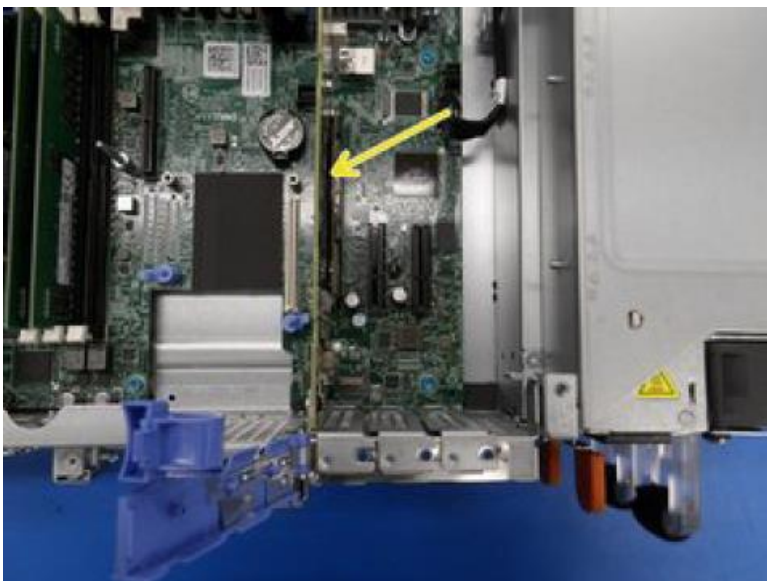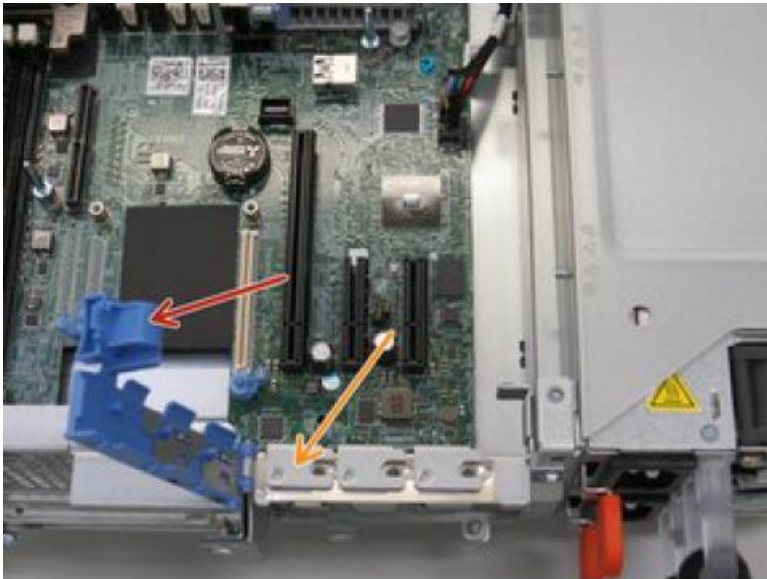



NOTICE

UNLESS EXPRESSLY SET FORTH IN A WRITTEN AGREEMENT SIGNED BY AN AUTHORIZED REPRESENTATIVE OF AXCIENT, INC., AXCIENT MAKES NO WARRANTY OR REPRESENTATION OF ANY KIND WITH RESPECT TO THE INFORMATION CONTAINED HEREIN, INCLUDING WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PURPOSE.

Axcient assumes no responsibility or obligation of any kind for any errors contained herein or in connection with the furnishing, performance, or use of this document. This document contains information that is property of Axcient, Inc. This document may not be copied, reproduced, reduced to any electronic medium or machine-readable form, or otherwise duplicated, and the information herein may not be used, disseminated or otherwise disclosed, except with the prior written consent of Axcient.

The information contained in this document is subject to change without notice.

All trademarks and registered trademarks are the property of their respective holders.